GB **ADP 8623**

PROGRAMME CHART

Whirlpool is a registered trademark of Whirlpool U.S.A.

Liq Rinç **Rinse aid level indicator**
Add rinse aid.

Sel **Salt level indicator**
Add regeneration salt.

Programme progress indicator

Rinç **Pre-wash**
Only lights up for programmes with prewash (the symbol "+" in the table below indicates that detergent must be added).

Lav **Rinse / Washing**

Séch **Drying**

Fin **Programme end**

Half Load / Multizone button
Load the upper or lower rack only.
This function can be used with any programme.
Press once = upper rack
Press twice = lower rack
Press 3 times = Off (half load function deactivated).

3h 6h 9h

Delayed start button
Starts the dishwasher at the set time.
It is possible to programme a delay of 3 - 6 - 9 hours.

Départ **Start button indicator lamp**
Switches on when the dishwasher is operating.
Flashes when a fault occurs.
Switches off at the end of the programme.

Programme Symbol and temperature		Load Crockery and cutlery	Detergent		Consumption * Normal load			Consumption * Half load		
			Pre-wash (small compartment)	Pre-wash (large compartment)	Water (Liter)	Energy (kWh)	Time (Min.)	Time (Min.)	Energy (kWh)	Time (Min.)
Trempage	**Prewash**	Crockery to be washed later.	-	-	**5,0**	**0,02**	**9**	**4,2**	**0,02**	**9**
Chrono	**Rapid 40° C**	Lightly soiled crockery with no dried-on food.	-	+	**13,0**	**0,85**	**30**	**13,0**	**0,75**	**30**
Eco	**Eco 50° C** 2)	Normally or heavily soiled crockery with dried-on food.	+	+	**17,0**	**1,35**	**85**	**14,2**	**1,28**	**83**
Quotidien	**Universal 65° C**	Normally soiled crockery.	-	+	**13,0**	**1,45**	**73**	**11,0**	**1,38**	**71**
Très sale	**Normal 65° C** 1)	Normally or heavily soiled crockery.	+	+	**21,0**	**1,64**	**93**	**17,0**	**1,55**	**90**
Casseroles	**Intensive 70° C**	Normal or heavily soiled, pans and saucepans.	+	+	**21,5**	**1,70**	**93**	**18,2**	**1,60**	**90**

*) Values for normal conditions. Values may vary in relation to usage, e.g.: different loads, water temperatures, water hardness and power supply voltage.

1) Programme recommended when using detergents of type A (non enzyme-based detergents).
2) Programme recommended when using detergents of type B (enzyme-based detergents).
Reference programme for Test Institute and energy label.

5019 100 91141

(We reserve the right to make technical modifications)

Quick Reference Guide

GB

Daily check list

1. Arrange crockery so that items do not touch each other.
2. Load cups at an inclination to facilitate water circulation.
3. In general, place the cutlery in the basket with the handles positioned downwards, but ensure that sharp knives and forks that might cause injury are placed in the basket with the handles positioned upwards.
4. Make sure the water jet can reach all loaded items and that the spray arms turn freely.
5. Turn on the water supply tap before starting the dishwasher.

Important:

- **Switch off the dishwasher: once the "Start" indicator lamp has switched off. If you switch off the dishwasher during a wash cycle, when switched on again the dishwasher resumes the cycle from where it was interrupted.**
- **If a fault occurs or you wish to change the current programme, press the "START" button for about 5 seconds until the Start indicator lamp switches off ! Refer to the "Troubleshooting Guide" in these user instructions to remedy any problems.**
- **If regeneration salt is to be added, IMMEDIATELY start a washing programme, to eliminate any residual salt.**

Upper rack

Crockery holders:

- Down: cups and long-stemmed glasses.
- Up: plates.

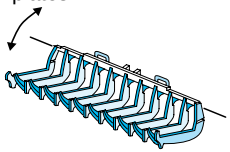

Glass holder:

- The glass holder can be moved sideways.
- Below: small glasses.
- Above: long-stemmed glasses.

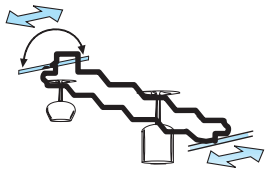

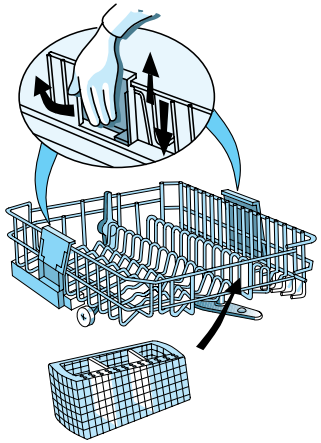

Half Load / Multizone button:
If only the upper rack is to be loaded, remove the cutlery basket from the lower rach and place it in the upper one.

Height adjustment:
(The dishwasher is delivered with the upper rack in the top position).

The rack height can also be changed when loaded.

- To lower: pull out the two side handles and gently lower the rack.
- To raise: pull up the two side handles until the rack clicks into place.
- The rack must be level on both sides.

Lower rack

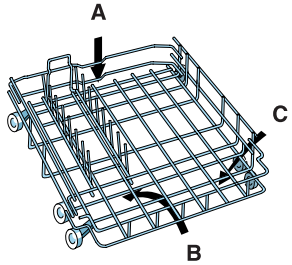

Half Load / Multizone button:
Loading the lower rack only: greater washing power, particularly for plates and saucepans.

Cutlery basket:
The cutlery basket can be removed to increase available space.



Plate holders:

- The plate holders may be removed to increase available space.
- To remove: pull the handle up.
- To reposition: simply insert in the required position (normal or crosswise).